 
 


User's Manual

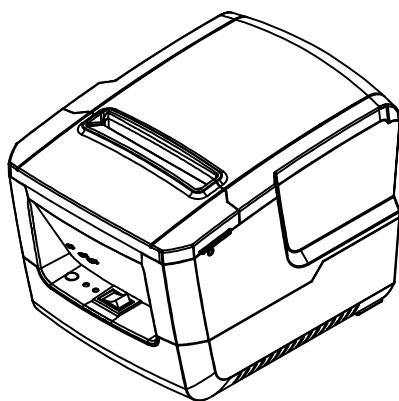

Operation panel

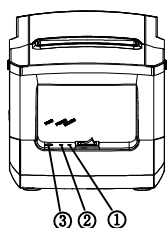


F3

1	Error LED	It indicates errors .See table for detial (T1)
2	Power LED	Power light is on when the printer is on.
3	FEED button	This button feeds paper or used for self-checking.

Connection

 connect to computer

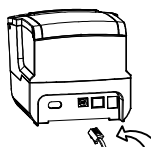

F4

connect to money drawer



F5

connect to AC adapter



F6

Please make power socket insert power interface,case drawer socket insert cash drawer interface,choose different interface cable insert corresponding interface and please choose different parameter,according to self-test receipt.

 


WARNING

UNPLUG all cables from the outlet before connection!
Pull out,insert in electrification may damage the printer.

Switch on/off

Press "o" Switch on power press "o" Switch off power like picture F7.



Warning



WARNING

NO touching auto-cutter or manual cutter.
DO NOT touch the print head and its related components in case you may get burns during the process or the printer may be damaged by static electricity.
SHUT DOWN your equipment immediately if it produces smoke,a strange odor or unusual noise.
Continued usage may lead to fire.Immediately unplug the equipment and contact your dealer or a factory service center for advice.
NEVER ATTEMPT to repair this product by yourself Improper repair work can be dangerous,thus invalidates your guarantee of this equipment at the same time.
BE sure to use the specified power source, connection to an improper power source may destroy your equipment and lead to fire.
DO NOT allow foreign matter to fall into the equipment.Penetration by foreign objets may lead to fire.I water or other liquid spills into this equipment,unplug the power cord immediately,and then contact your dealer.Continued usage may lead to fire.

 
Attention




CAUTION

DO NOT connect cables in ways other than those mentioned in this manual.Different connections may cause equipment damage and burning.
BE sure to set this equipment on a firm,stable, horizontal surface.The product may break or cause injury if it falls.
DO NOT use in locations subject to high humidity or dust levels.Excessive humidity and dust may cause equipment damage.
DO NOT expose this equipent directly under the sun,or to the blaze or other heat source,which may reduce the effect of printing.
TO ensure safety,unplug this product before leaving it unused for an extendedperiod.

Assemblies

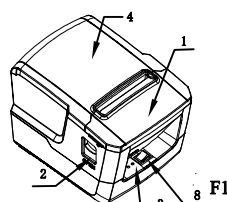


F2

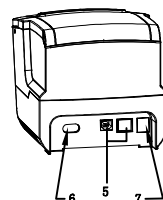 

No.	Name
1	Auto-cutter cover
2	Cover open button
3	Control panel
4	Paper cover
5	Data interface
6	Power interfac
7	Cash drawer interface
8	Power switch

2

 Installing the paper roll

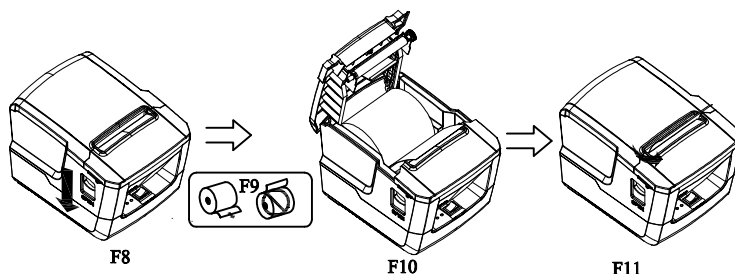

- 1.Press the button to open the cover. see F8.
- 2.Remove the paper spool,then remove any used paper roll core.And insert a new roll paper,be aware of the right direction(shown in the F9)
- 3.Pull out some paper,as shown in the F10,put the spool with roll paper altogether into the paper case,then close the cover.
- 4 Tear off the paper.

Feed paper

Finger touch Feed button,printer will feed paper,finger leave feed button ,stop to feed paper.

Self-Checking

Press FEED button and hold it,turn on the power,the self-test receipt will be printed.

Drive Installation

To use the printer function system driver, please install the driver provided by factory.

Setting

- 1.To set up the parameters, please use the set up tools provided by factory.
- 2.The Ethernet port model printer set up can also visit our website, connect your computer and printer with cable first, then printing a self-test paper to check the IP address of the printer (factory default: 192.168.1.211), access the website on your computer and type the printer IP address into the address bar, enter the setting page to set up the printer.